

70m 8x8 HDMI 2.0 HDBaseT Matrix with 8 hdmi loop out Support 4K@60hz YUV4:4:4, 18Gbps, HDR

OPERATION MANUAL



Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

SURGE PROTECTION DEVICE RECOMMENDED

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

Catalogue

1. Features.....	4
2. Package Contents.....	4
3. Specifications.....	4
4. Panel Descriptions.....	5
4.1 Input / output channel key operation.....	6
4.2 Video switching operation.....	7
4.2.1 Video switch.....	7
4.2.2 Video Control.....	7
The specific operation is as follows:.....	7
4.2.3 Audio Control.....	9
4.3 EDID Set Mode Interface.....	11
4.4 SETUP mode Interface.....	12
1. RS-232 Baud Rate setting.....	12
2. DHCP On/Off setting.....	12
3. Reboot setting.....	13
4. Factory setting.....	13
4.5 INFO mode Interface.....	14
5. Application Diagram.....	15
6. Remote Control Description.....	16
7. IR system.....	16
8. Command Control.....	17
9. PC Tool Control.....	18
“VIDEO” interface description:.....	19
“AUDIO” interface description:.....	21
“EDID” interface description:.....	22
“Network” interface description:.....	23
“System” interface description:.....	24
10. Web Control.....	25
10.1 Change the IP address of your PC.....	25
10.2 Enter Web and Control.....	26
“VIDEO” interface description:.....	26
“AUDIO” interface description:.....	27
“EDID” interface description:.....	28
“Network” interface description:.....	29
System interface description:.....	30
11.RS232 Pass through.....	31
12. RS232 Online upgrading Firmware.....	31
MAINTENANCE.....	32
PRODUCT SERVICE.....	32
WARRANTY.....	32
MAIL-IN SERVICE.....	33

1. Features

- Incorporate HDBaseT technology
- HDMI 2.0 version support 4K@60Hz YUV4:4:4, 18G, HDR10, Dolby Vision (HDMI LOOP)
- Any one of the 8 HDMI Sources to any one of the 8 HDMI Displays
- Each of the 8 outputs includes one HDBaseT output and one HDMI output simultaneously
- Transmit up to 70m under 1080p,40m under 4K@60Hz
- HDCP 2.2/1.4 compliant
- With wide-band Bi-Direction IR routed control(38~56KHz)
- Support 8x Analog Audio input
- Support 8x Analog Audio and 8x SPDIF Audio extraction output
- Support RS232 pass through
- Support Panel Button with LCD, IR Routing, RS232, TCP/IP, PC Tool Control
- Support POC (Receiver powered by HDBaseT Matrix)
- 2U rack design with mounting ears
- AC 110V~220V/50HZ/60HZ input


2. Package Contents

- 1). 1x Main Unit (HDBaseT Matrix) and 8x Receivers
- 2). 1x Power Cable
- 3). 1x Remote control
- 4). 17xIR Transmitter cables, 17x Wide-Band IR Receiver cables
- 5). 1x CD for control software & user manual


3. Specifications

Operating Temperature Range	-5 to +40°C(23 to +104 °F)
Storage Temperature Range	-10 to +60°C(-14 to +140 °F)
Operating Humidity Range	5 to 90 % RH (no condensation)
Input Video Signal	0.5-1.0 volts p-p
Input DDC Signal	5 volts p-p (TTL)
Bandwidth	18Gbit/s
Video Format Supported	4K@60Hz,YUV4:4:4 4k@30Hz/1080P/1080i/720P/576P/480P/576i/480i
HDCP Compliant	HDCP2.2 and HDCP1.4
Output Video	HDMI2.0 and HDMI 1.4 (over HDBaseT and HDMI)
Audio Format Supported	PCM, Dolby5.1, DTS5.1 digital audio
Maximum Transmission Distance	1080P 70m, 4K 40m
Power Consumption	125watts (Max.)
Dimensions	L438 x W394 x H88 mm
Mass (Main Unit)	8 KG

4. Panel Descriptions

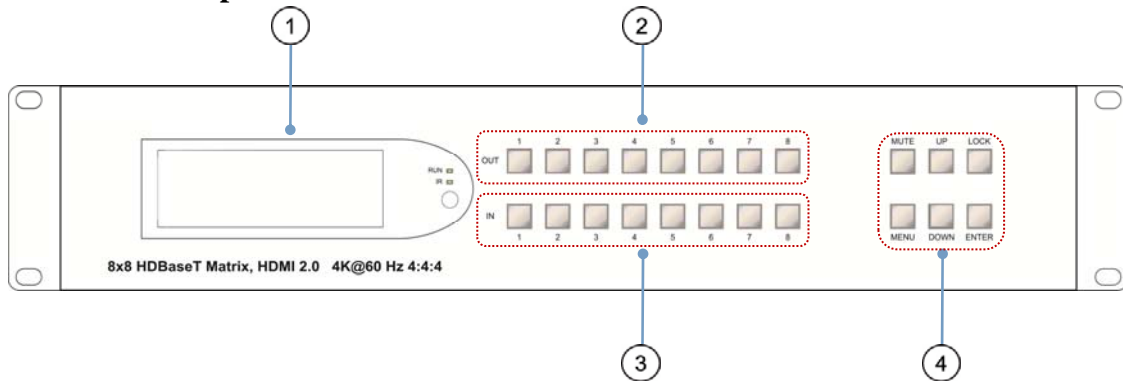

- ① LCD: Showing Matrix information
- ② Output button OUT1~8
- ③ Input button IN1~8
- ④ Function button: MUTE; MENU; UP; DOWN; LOCK; ENTER

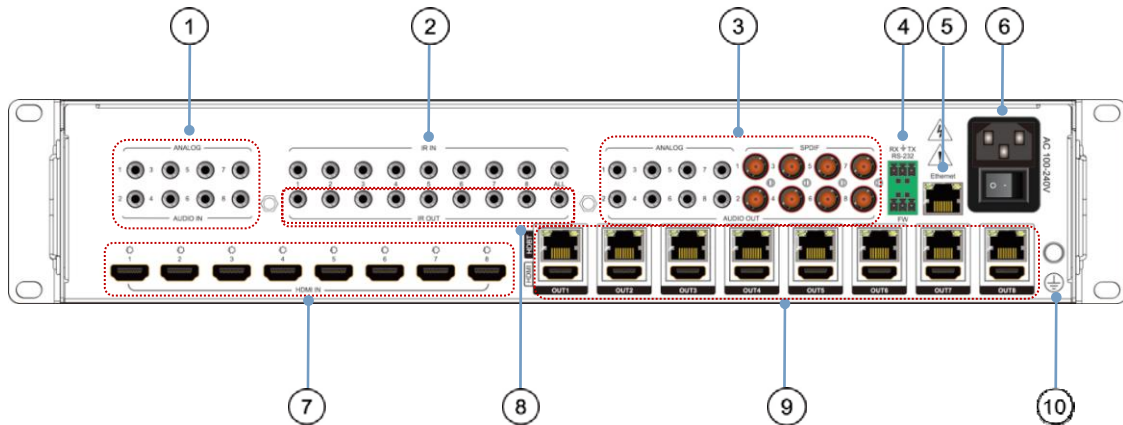

- ① AUDIO IN (Analog x8)
- ② IR in port x8 & All in
- ③ Audio out (analog x8; spdif x8)
- ④ 2xRS232 port (one for update, one for pass through)
- ⑤ Ethernet port
- ⑥ Power On/Off
- ⑦ HDMI Input x8
- ⑧ IR out port x8 & All out
- ⑨ HDBaseT out x8 & HDMI Loop out x8
- ⑩ Grounding



4.1 Input / output channel key operation


Channel	Button method
Any Key	The first operation of the button can wake up the screen
Input 1-8	Directly press the number key, such as input channel 1, and select "1" to press (only when the output port is selected, the input channel number will be valid)
Output 1-8	Directly press the number key, such as the output channel 5, select the key "5" and press it again to cancel the selection; Long press output channel 8 to select all channels, and long press again to cancel
MENU	Function Button; Enter the function option or back to previous option
ENTER	Confirm Button: enter function selection mode
UP	Button for UP option
DOWN	Button for NEXT option
MUTE	Shut down the current selected output, press again to wake up
LOCK	Long press lock (button built-in blue light on), Long press again to cancel lock (button built-in blue light off)

4.2 Video switching operation

4.2.1 Video switch

The signal switch includes 8 free switching channels, which can be configured as input/output according to the requirements, forming a matrix of 1 x 8 ~ 8 x 1, which can switch any input. Signal to 1 channel output or all channel output.

The specific operation is as follows:

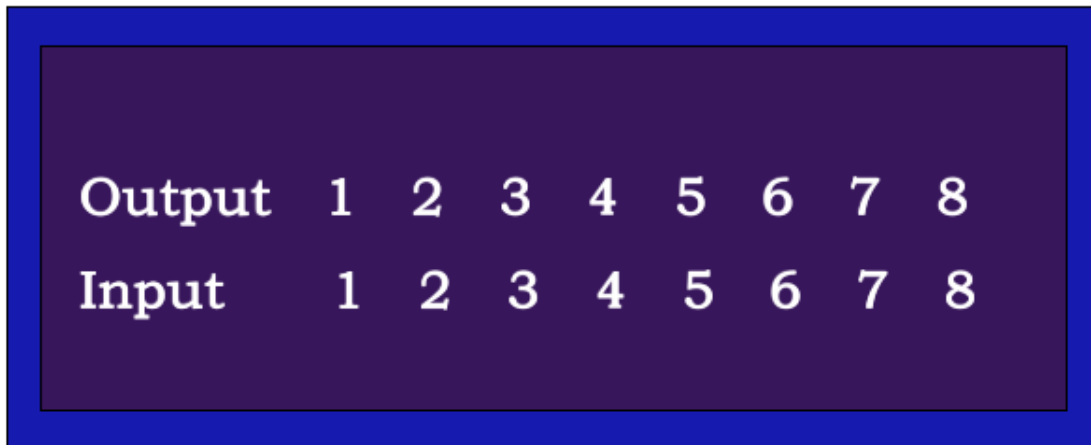

Video switching mode (P1)

Switch the input to the output

Operation format: "output channel" + "input channel"

For Example: Output port 2,5,8 switch to input 7

Operation: Press OUT number "2" "5" "8" + IN number "7" to complete the switch

4.2.2 Video Control

The video interface have two sub menu




1. Video Switch
2. Video On/Off

The specific operation is as follows:

1.Video Switch

Switch any output to one input or all outputs to the same input

- ①Select "Video" in the menu and press "ENTER"
- ②Then use "UP" "DOWN" button to select "Switching"
- ③Press "ENTER" enter next page
- ④Press "UP" "DOWN" button to select the output (The ninth port means ALL)
- ⑤Press "ENTER"
- ⑥Press "UP" "DOWN" to select the input
- ⑦Press "ENTER" , Switch Done

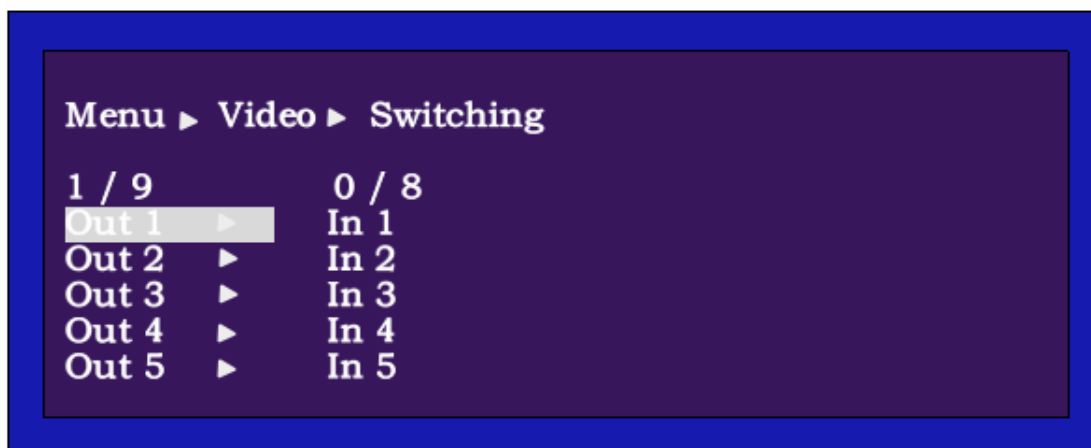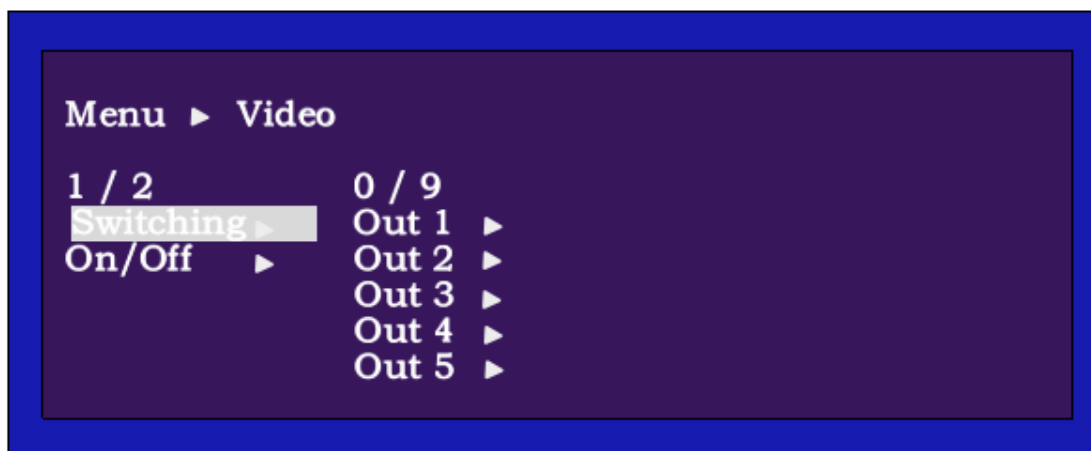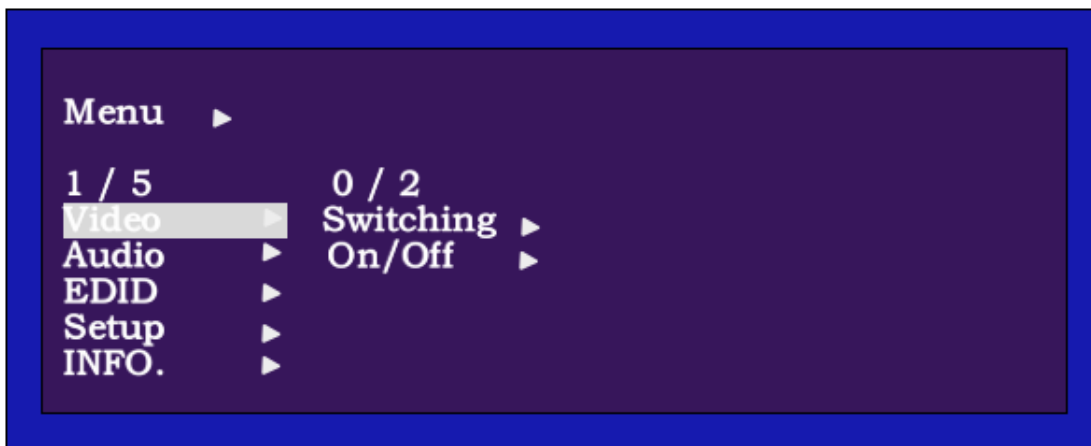

Video Switch (P2)

2.Video On/Off

Turn on/off any output video or all outputs video



①Select "Video" in the menu and press "ENTER"

②Then use "UP" " DOWN" button to select "On/Off"

③Press "ENTER" enter next page

④Press "UP" " DOWN" button to select the output (The ninth port means ALL)

- ⑤ Press "ENTER"
- ⑥ Press "UP" " DOWN" to select "On" or "Off"
- ⑦ Press "ENTER" , Switch Done

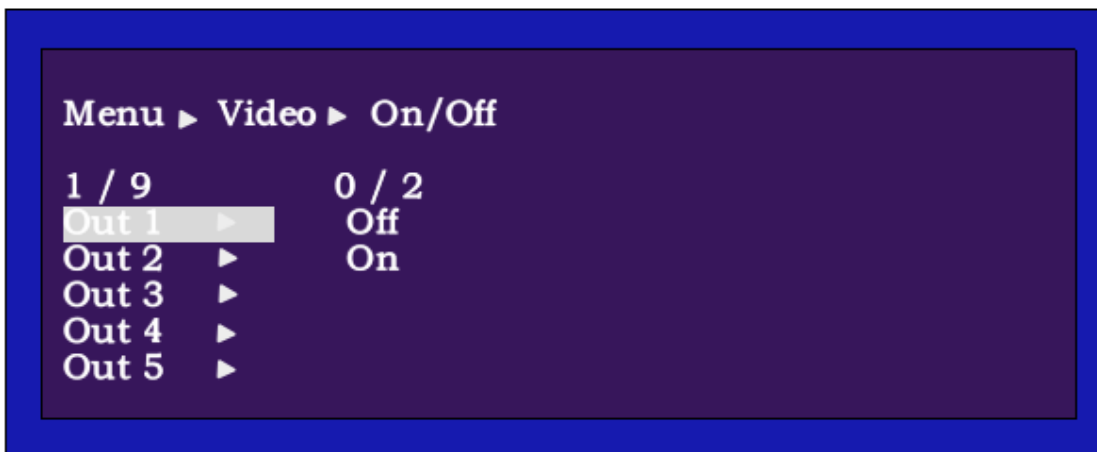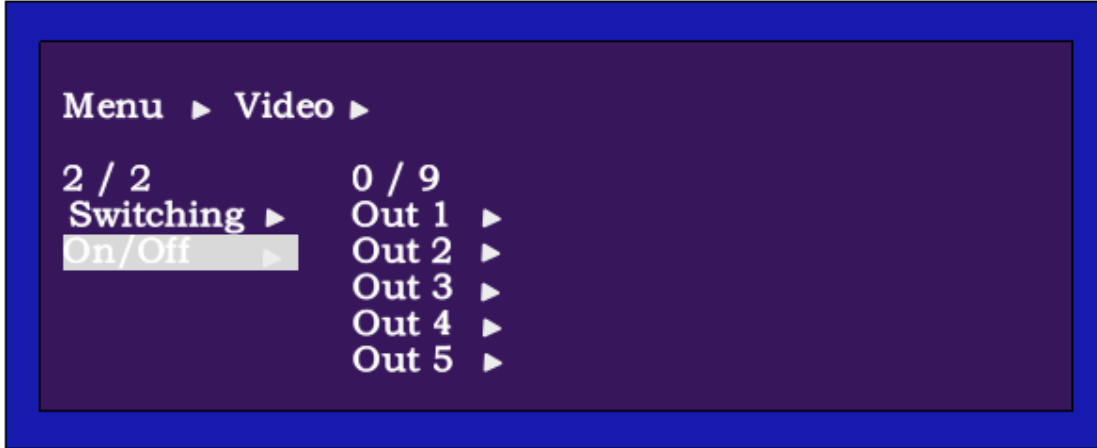

Video On/Off (P3)

4.2.3 Audio Control

The Audio Control have two sub menu

1. Audio Embed
2. Audio De-Embed

The specific operation is as follows:


1. Audio Embed

Audio Embed is for setting input ports audio, it have: Analog; HDMI; Mute setting.

- ① Select "Audio" in the menu and press "ENTER"
- ② Then use "UP" " DOWN" button to select "Embed"
- ③ Press "ENTER" enter next page
- ④ Press "UP" " DOWN" button to select the output (The ninth port means ALL)
- ⑤ Press "ENTER"

⑥Press "UP" " DOWN" to select the mode: Analog; HDMI; Mute

⑦Press "ENTER" , Done

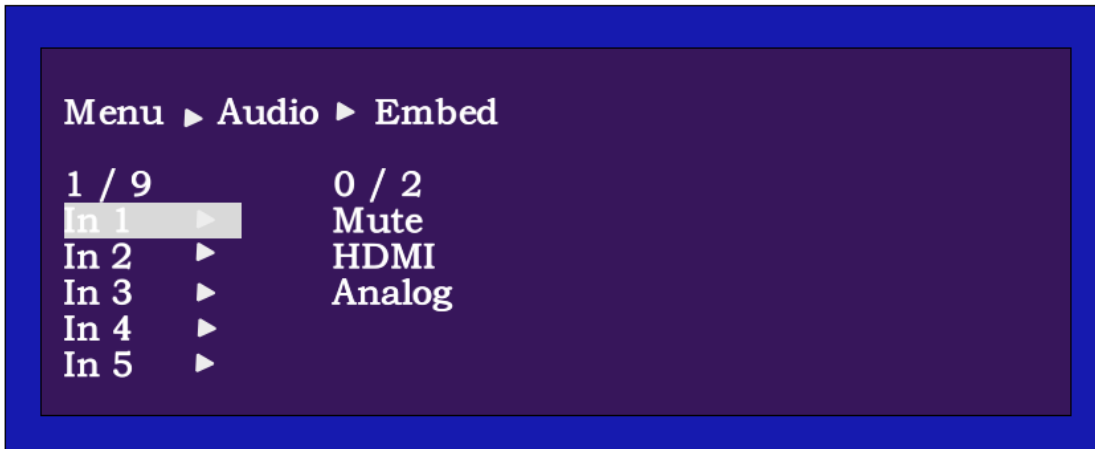

Audio Embed mode (P4)

2.Audio De-Embed

In the mode of Audio De-Embed has Analog and SPDIF in each output port and can switch the audio Mute and Unmute

①Select "Audio" in the menu and press "ENTER"

②Then use "UP" " DOWN" button to select "De-Embed"

③Press "ENTER" enter next page


④Press "UP" " DOWN" button to select the output (The ninth port means ALL)

⑤Press "ENTER"

⑥Press "UP" " DOWN" to select the mode of Analog and SPDIF audio format

⑦Press "ENTER" , confirm

⑧Press "Mute" or "Unmute" to switch the audio

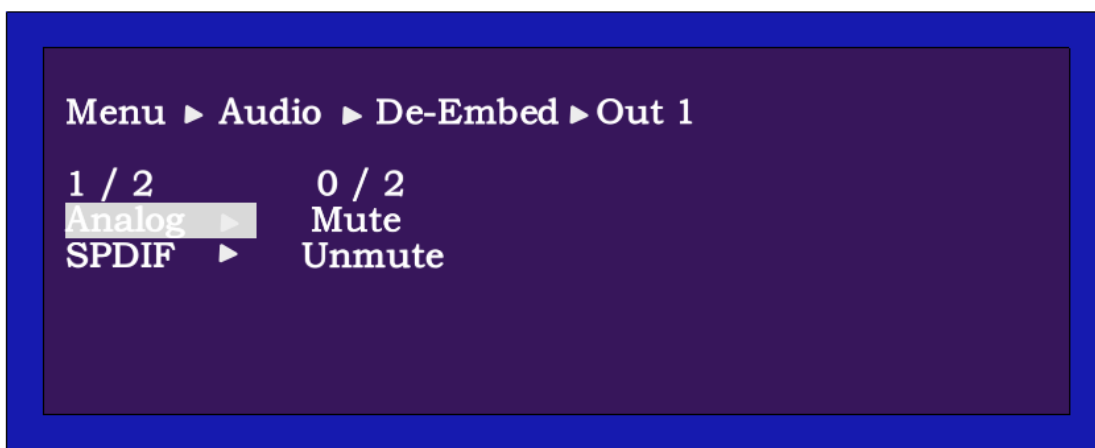

Audio De-Embed mode (P5)

4.3 EDID Set Mode Interface



Default EDID

Default1	4K60 444 HDR AC-35.1	Default5	4K30 444 3D LPCM2.0
Default2	4K60 444 HDR LPCM7.1	Default6	4K60 420 HDR 3D AC-35.1
Default3	4K60 444 HDR LPCM2.0	Default7	4K60 420 3D LPCM2.0
Default4	4K60 444 LPCM2.0	Default8	1080P60 444 3D LPCM2.0

EDID Mode can set each input's EDID, Include: Default EDID; User EDID; Copy EDID; Copy HDBT EDID.

Specific operations are as follows

- ①Select "EDID" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select the input (The "In9" means ALL input)
- ③Press "ENTER" enter next page
- ④Press "UP" " DOWN" button to select the MODE, then press "ENTER" to select the EDID
- ⑤Press "Menu" Back to previous option
- ⑥Press "UP" " DOWN" to select the "Data" then "ENTER" to next
- ⑦Press "UP" " DOWN" to select the Num1~8, then press "ENTER" to confirm

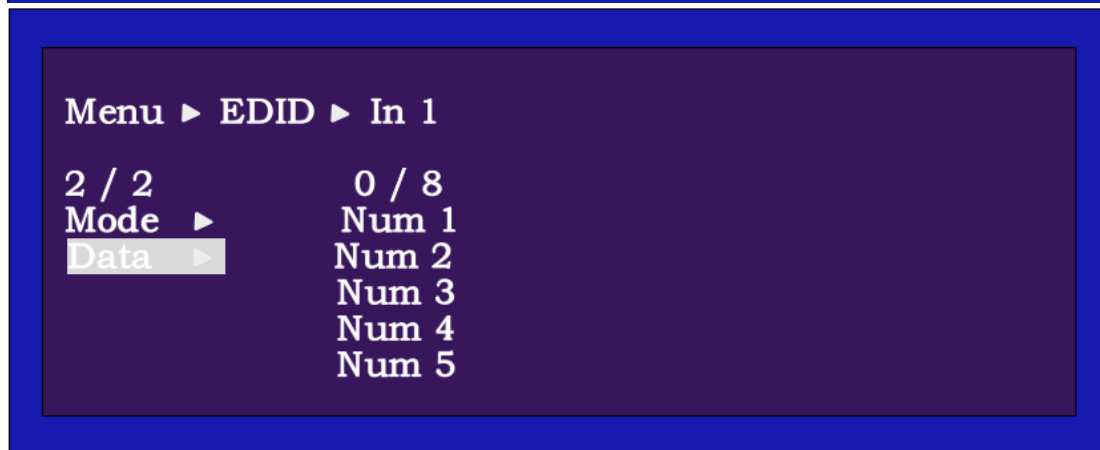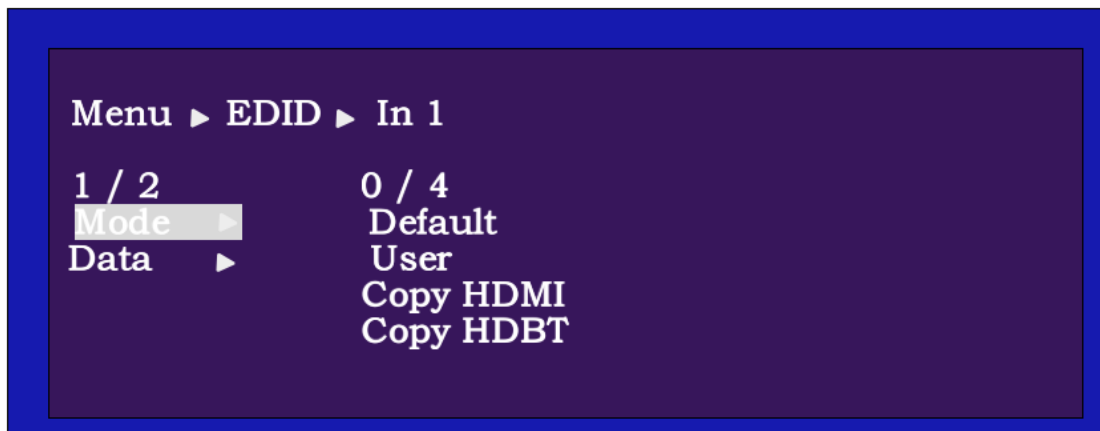

EDID Setting mode (P6)


4.4 SETUP mode Interface

SETUP mode can set the device's RS-232 baud rate, DHCP, Reboot, Factory Specific operations are as follows

1. RS-232 Baud Rate setting

It has 7 kinds of baud rates inside the device: 2400; 4800; 9600; 19200; 38400; 57600; 115200
Default Baud Rate is: 115200

- ①Select "Setup" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select the "BAUD" and press "ENTER"
- ③Press "UP" " DOWN" button to select the baud rate and press "ENTER" to confirm

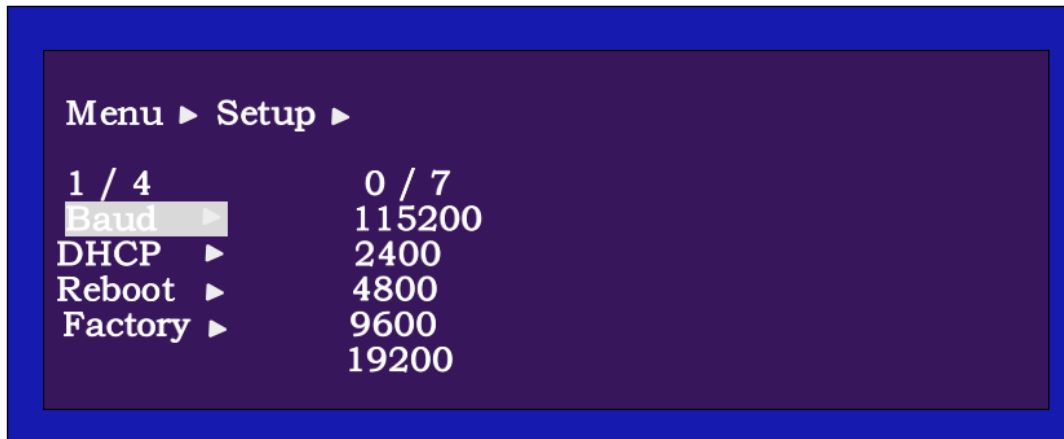


BAUD RATE setting (P7)

2. DHCP On/Off setting

On means Dynamic; Off means Static


- ①Select "Setup" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select the "DHCP" and press "ENTER"
- ③Press "UP" " DOWN" button to select "On" or "Off" and press "ENTER" to confirm

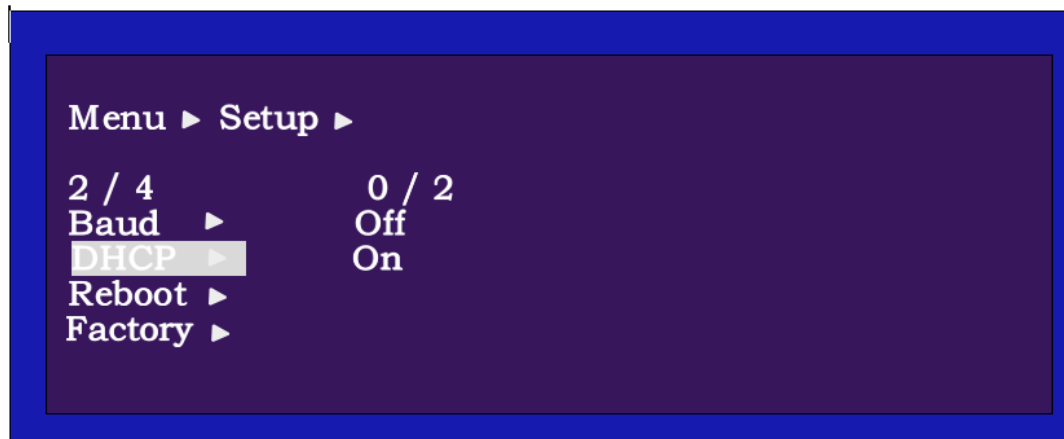

DHCP setting (P8)

3. Reboot setting


- ①Select "Setup" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select the "Reboot" and press "ENTER"
- ③Press "UP" " DOWN" button to select "No" or "Yes" and press "ENTER" to confirm

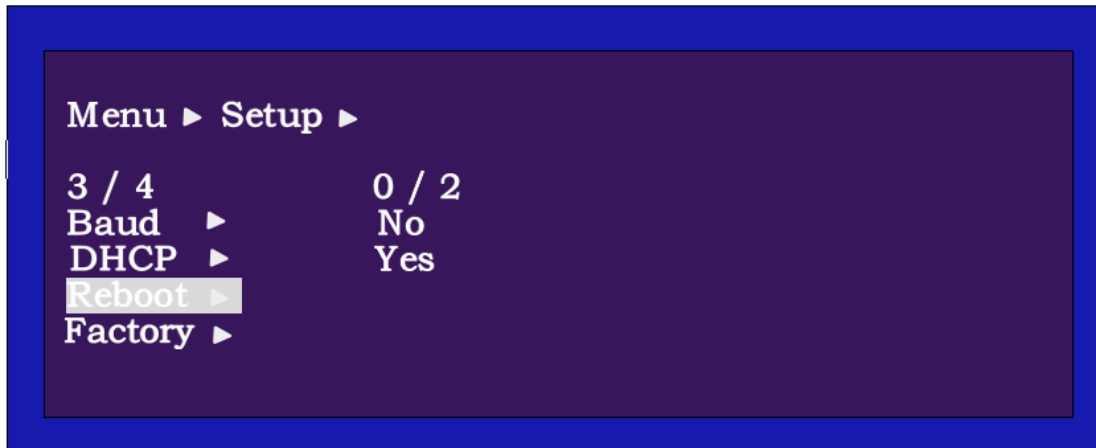

Reboot setting (P9)

4. Factory setting


- ①Select "Setup" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select the "Factory" and press "ENTER"
- ③Press "UP" " DOWN" button to select "No" or "Yes" and press "ENTER" to confirm

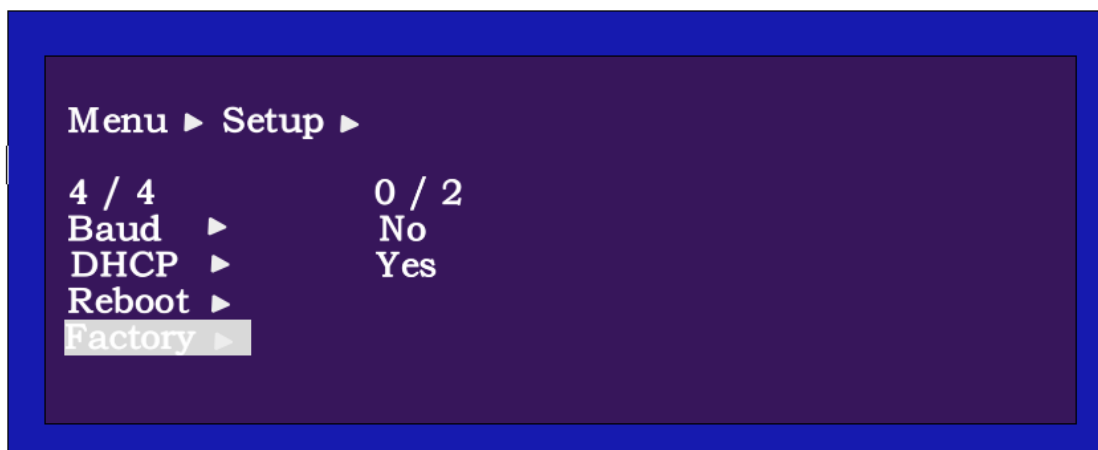

Factory setting (P10)


4.5 INFO mode Interface

Check the device information: IP or System information

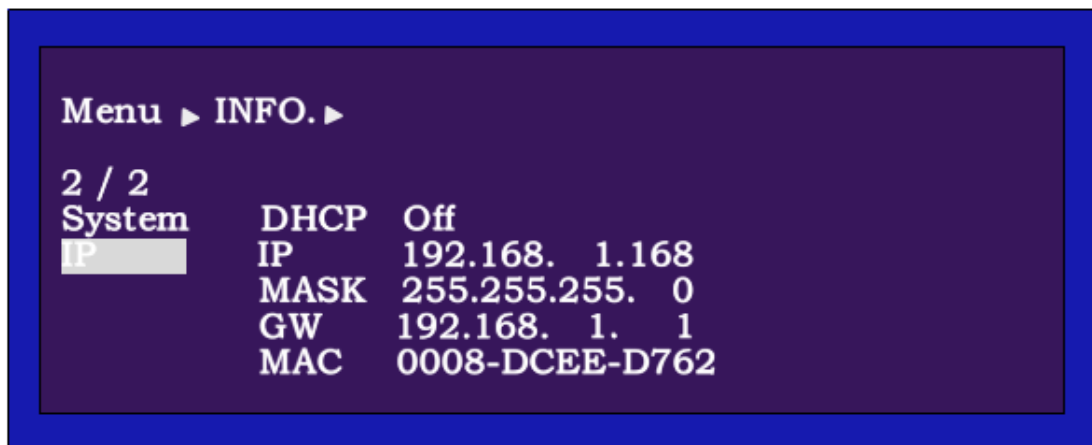


INFO mode (P11)

5. Application Diagram

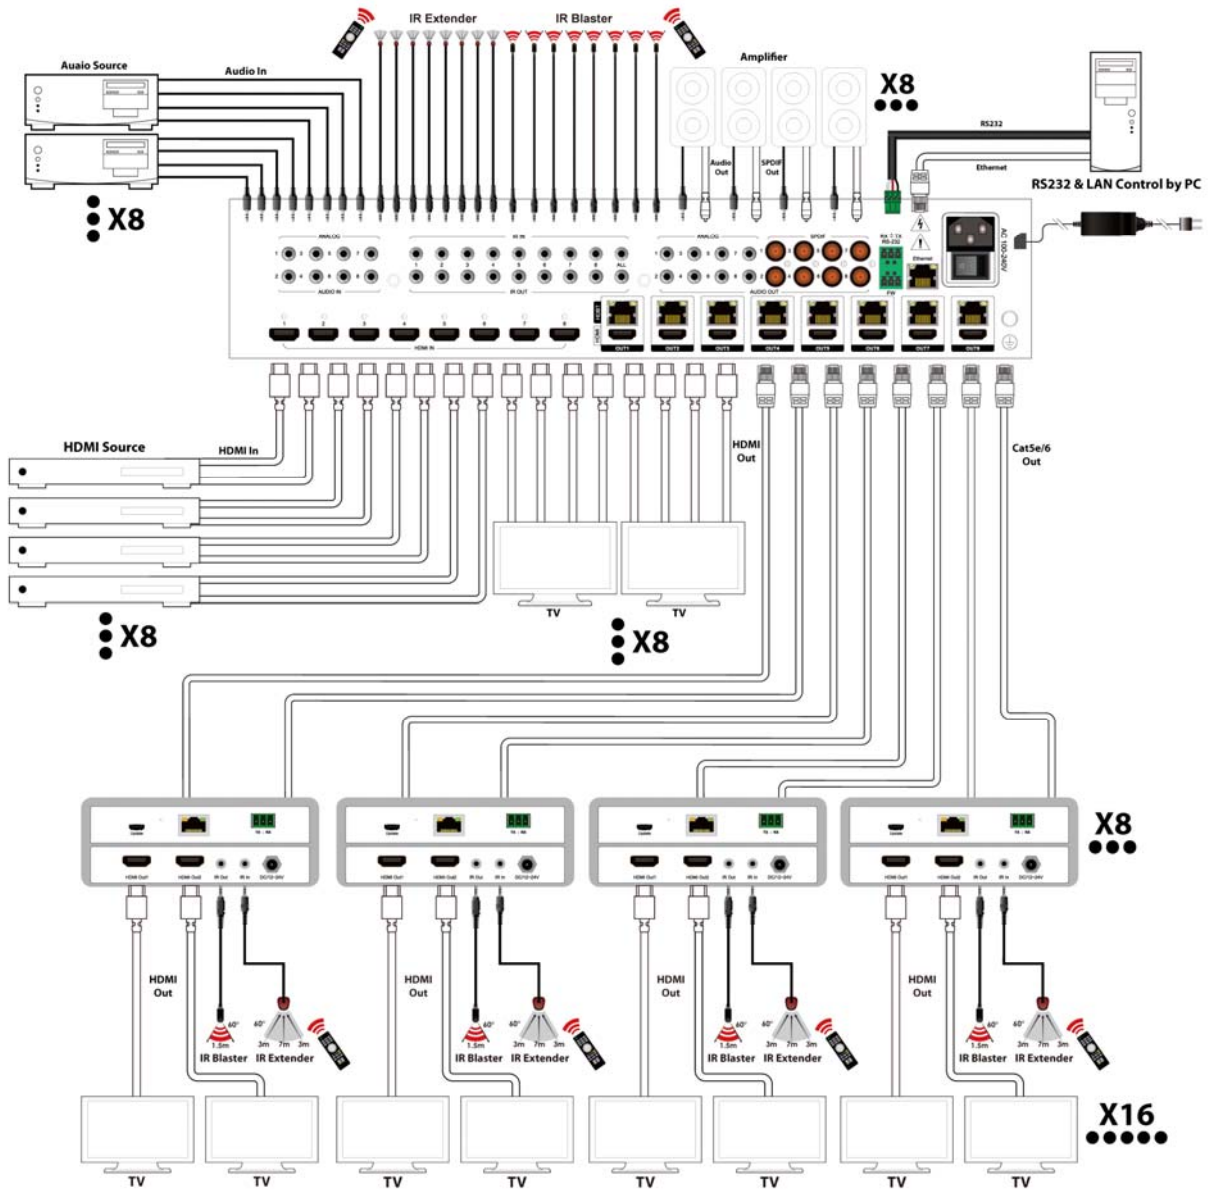


6. Remote Control Description

- ① Standby Mode
- ② Lock or Unlock the Panel Button
- ③ Choose output from 1-8
- ④ Choose all the outputs.
- ⑤ X: Turn on/off output port which you select
- ⑥ PTP button: Mirror all inputs and outputs
(Ex. Input 1 to output 1, input 2 to output 2, etc)
- ⑦ Choose input from 1-8
- ⑧ Menu (back to previous option) button
- ⑨ UP and DOWN button
- ⑩ Enter button

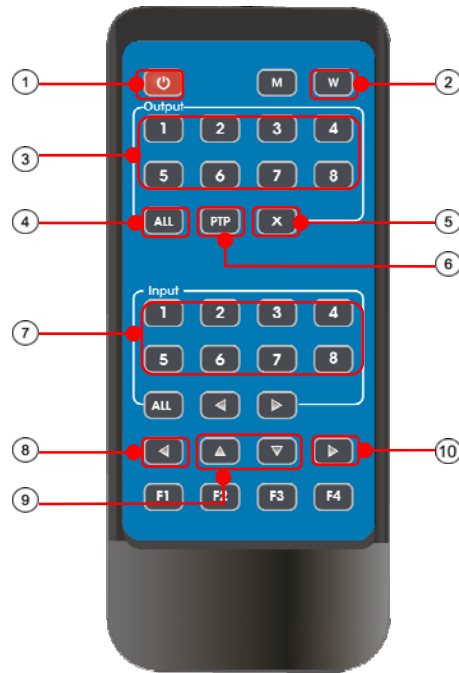


7. IR system

The matrix can pass the IR signal through the IR system to the HDMI source or pass the IR signal from the HDMI source to the HDMI sink

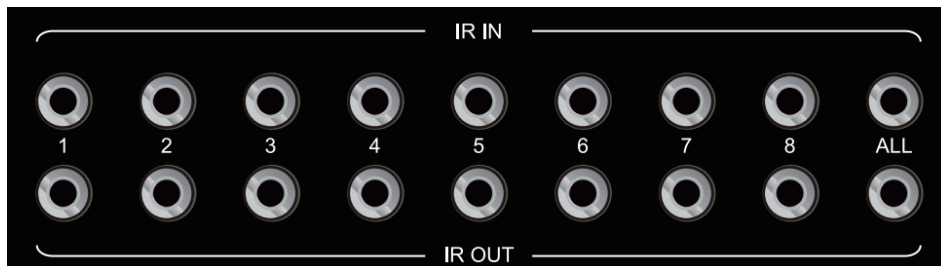

Dual way IR using:

- Step1: "IR IN" is for HDBaseT output, "IR OUT" is for input channel
- Step2: "IR IN ALL" Controlled by all input IR; "IR OUT ALL" Controlled by all output IR.
- Step3: HDBaseT receiver support connect with IR receiver to control the Matrix by remote
- Step4: Matrix IR channel "IR IN ALL" support connect with IR-RX cable to control the Matrix by remote

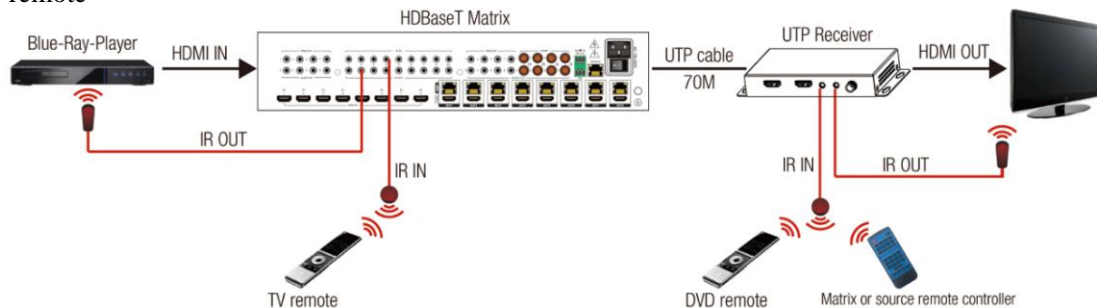

8. Command Control

Control software operation:


The serial control software is illustrated with SSCOM32 as an example.

Basic Settings:



Double-click the software in the installation package to run specifically (as shown in figure 1 below) and install the RS232 software on the computer.

Enter the main interface of the software, as shown in the figure below.

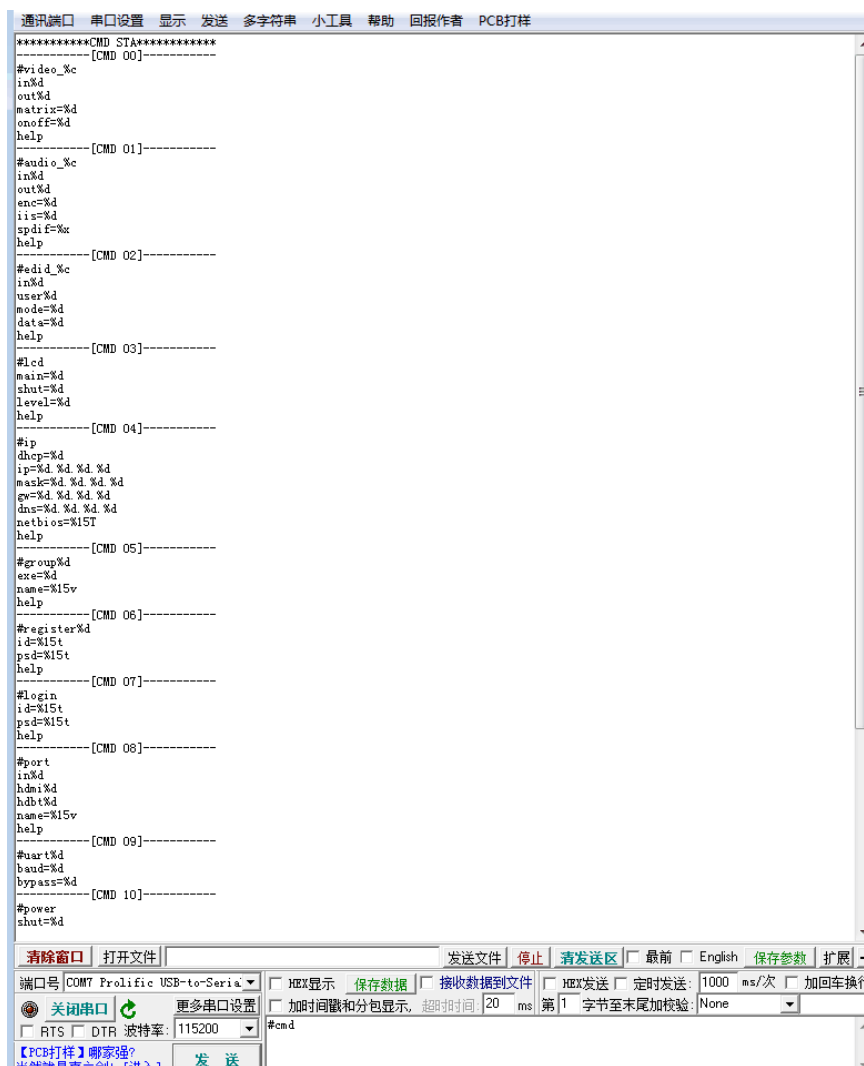

In the parameter configuration area, the serial number of serial port and PC connection is selected, and the baud rate of the communication protocol is completed: 115200 (default), data location: 8. Stop bit: 1, check bit: no, you can input the instruction in the command input area and control the machine or remote receiver.

Instructions:

1. All commands start from “#”, command head “%c”: “d” parameters, “l” lock, “s” save.
2. The “_” in the commands cannot omit. Parameter: %d: 0 means ALL.
3. Command head & Parameter1 & Parameter2... need to add one “SPACE”.

The following table is only an example. Please refer to the list of instructions.


Instruction description	instruction	parameter 1	parameter 2	parameter 3
Video channel switch	#video_%c	In%d	Out%d	matrix=%d
	d: parameters			
	l: lock s: save	0: ALL input 1~8: 1~8 input	0: ALL output 1~8: 1~8 output	1-8 : Switch to?
EDID	#EDID_%c	In%d	user%d	mode=%d
	d: parameters			
	l: lock s: save	0: ALL input 1~8: 1~8 input	0 : All EDID 1~8 EDID	0:default 1:user

Please refer to the " Command list" for details.

Example: ALL output switches to input 8.


Operation format: #video_d out0 matrix=8

9. PC Tool Control

1. Download the  **8x16 HDMI2.0 Matrix.exe** to your computer, then open it.
2. Using USB to RS232 cable connect to the Matrix
3. Press “Search” button to find out the right port then “Open Port”

“LINK” interface description:



1. Communication parameters: RS232 port baud rate and port information can be displayed. Click the drop-down queue to set the port and baud rate from 2400 to 115200
2. Port setting: Search RS232 Port: “Open Port” is a compound switch Port. When showing “Open Port” means Disconnect. When showing “Close Port: Connecting
3. Refresh button: “Search”
4. Send instruction bar: the corresponding instruction can be sent according to the command list.
5. Instruction feedback display bar: print the log after sending corresponding commands, and operate the equipment to print as well

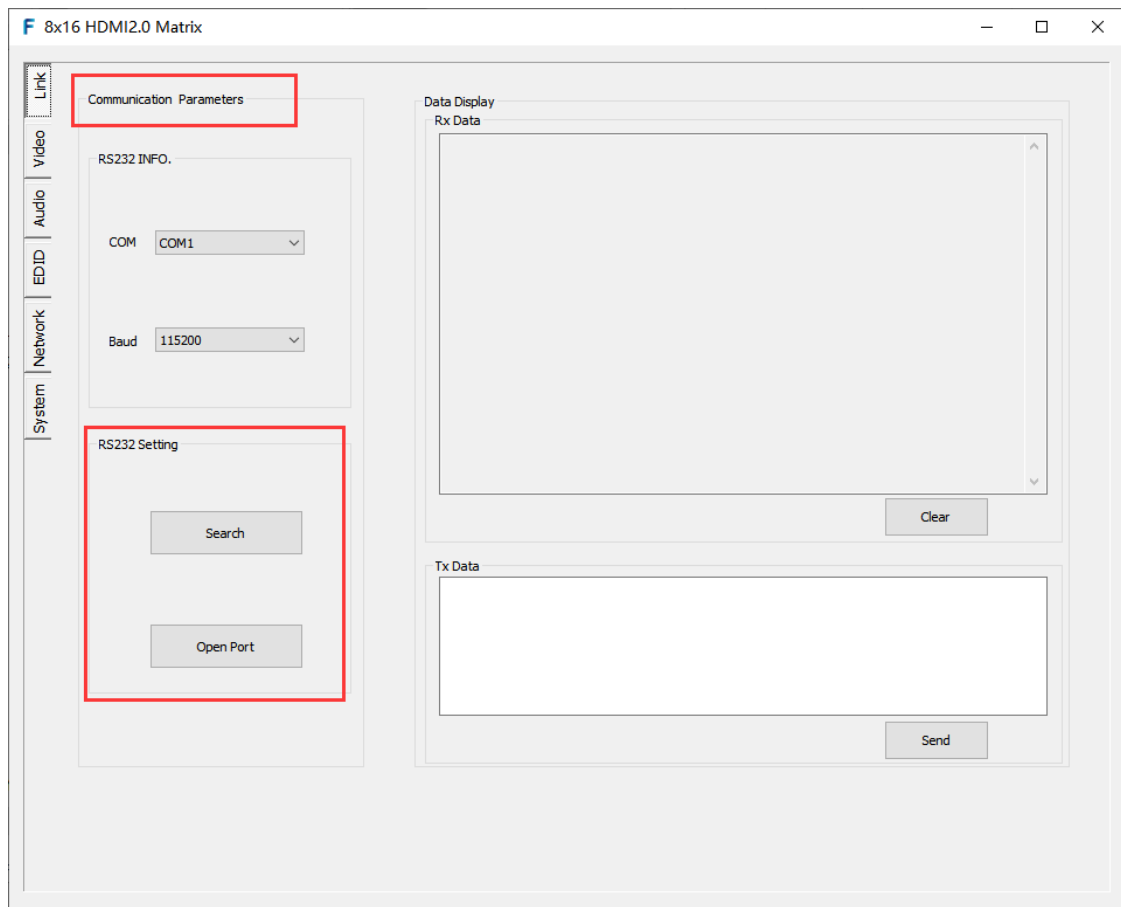

“LINK” interface (P14)

“VIDEO” interface description:

1. Output option bar: 0d>>0x represents display of current device port info.
0d: 1~8 input ports, 0x: 1~8 output ports, all means all selection, support multiple selection, single selection
2. Input options: 01~08 means input port 1~8
3. Application Preset: 8 application preset are supported, save: 8 different application scenarios can be saved, and recall: call any one of them
4. Rename: HDMI, HDBT, input and other port names can be modified. A total of 8 names are supported for each port. Mouse over one of the output options displays the HDMI and HDBT names, and mouse over one of the input options displays the input name.

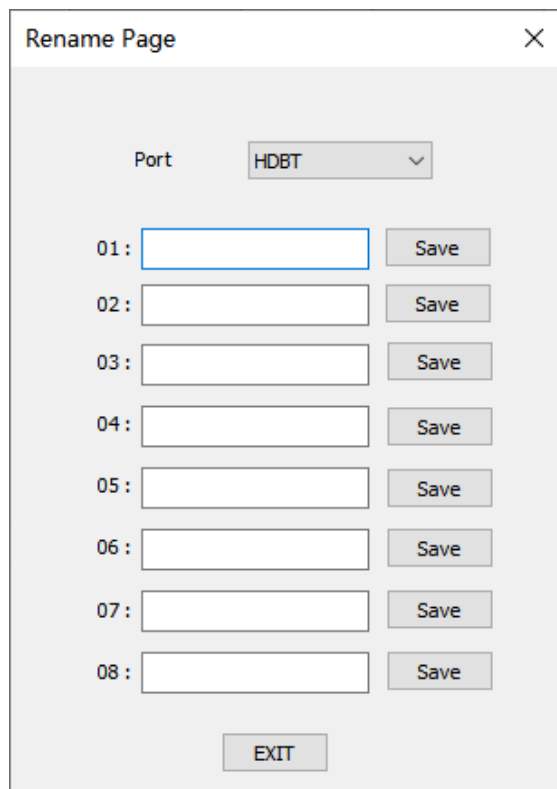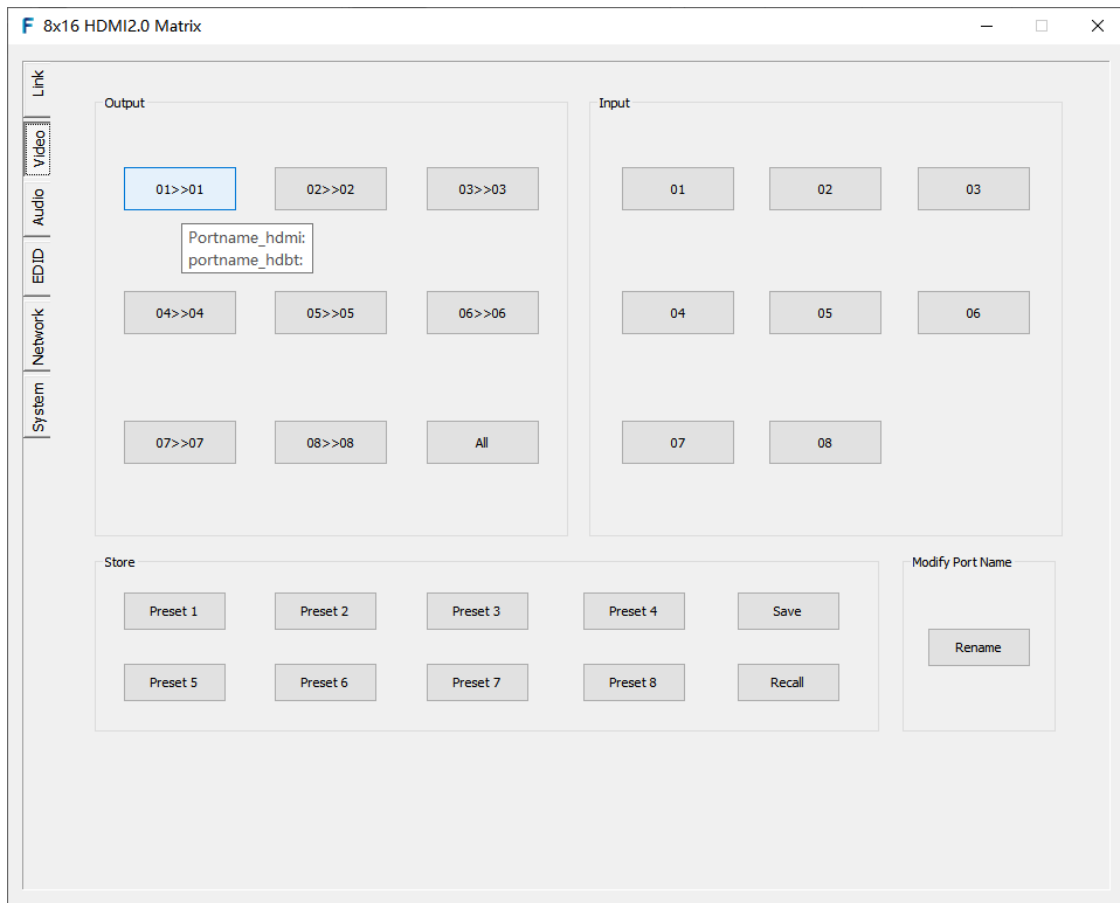


Video switch interface (P15)

Usage:

1. Video switch: select any of the output options and then click any of the input options to switch directly, for example: click 04>>01 and select 01. The output 1 TV will display the input 1 source
2. Application Preset: users can switch and save in the application preset according to the commonly used video, and there is no need to switch the scenes for direct invocation next time. For example, after clicking all, select 08; after clicking preset1, click the red box again to save; after clicking preset1, select the green box recall to call
3. Rename modification: click on the rename page interface, select modify port type (HDMI, HDBT, input) in mode, enter the new name in the box after 01, and click save to complete the change

“AUDIO” interface description:

1. Input audio option bar: HDMI audio input and analog audio input can be selected; H represents the audio of HDMI itself; A represents the mixing of analog audio
2. Output audio option bar: select analog audio separation, spdif audio separation, A represents analog audio separation, S represents digital audio separation
3. The blue background is selected, and gray indicates mute. It can be set with single, multiple or all options

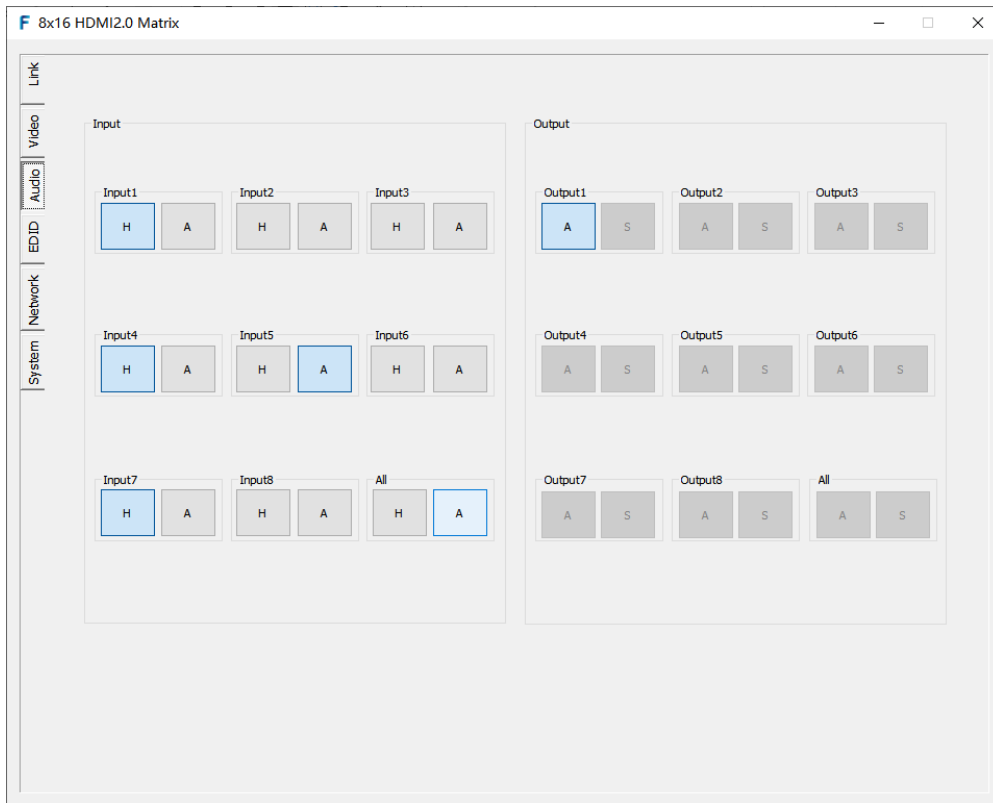

“EDID” interface description:


1. Input option bar: 01>>01~01>>08 is the port status, for example: 01>>01; 01> means the first HDMI port EDID, and >01 means the input port, which means the first HDMI port EDID is copied to the first signal source (in HDMI mode).

2.EDID option bar: four modes can be selected in the Output Mode drop-down box, User EDID (editable), built-in Default EDID, Output port HDMI EDID, Output port HDBT EDID

Built-in Default EDID:

Default1	4K60 444 HDR AC-35.1	Default5	4K30 444 3D LPCM2.0
Default2	4K60 444 HDR LPCM7.1	Default6	4K60 420 HDR 3D AC-35.1
Default3	4K60 444 HDR LPCM2.0	Default7	4K60 420 3D LPCM2.0
Default4	4K60 444 LPCM2.0	Default8	1080P60 444 3D LPCM2.0

3.EDID display bar: displays the currently set EDID information

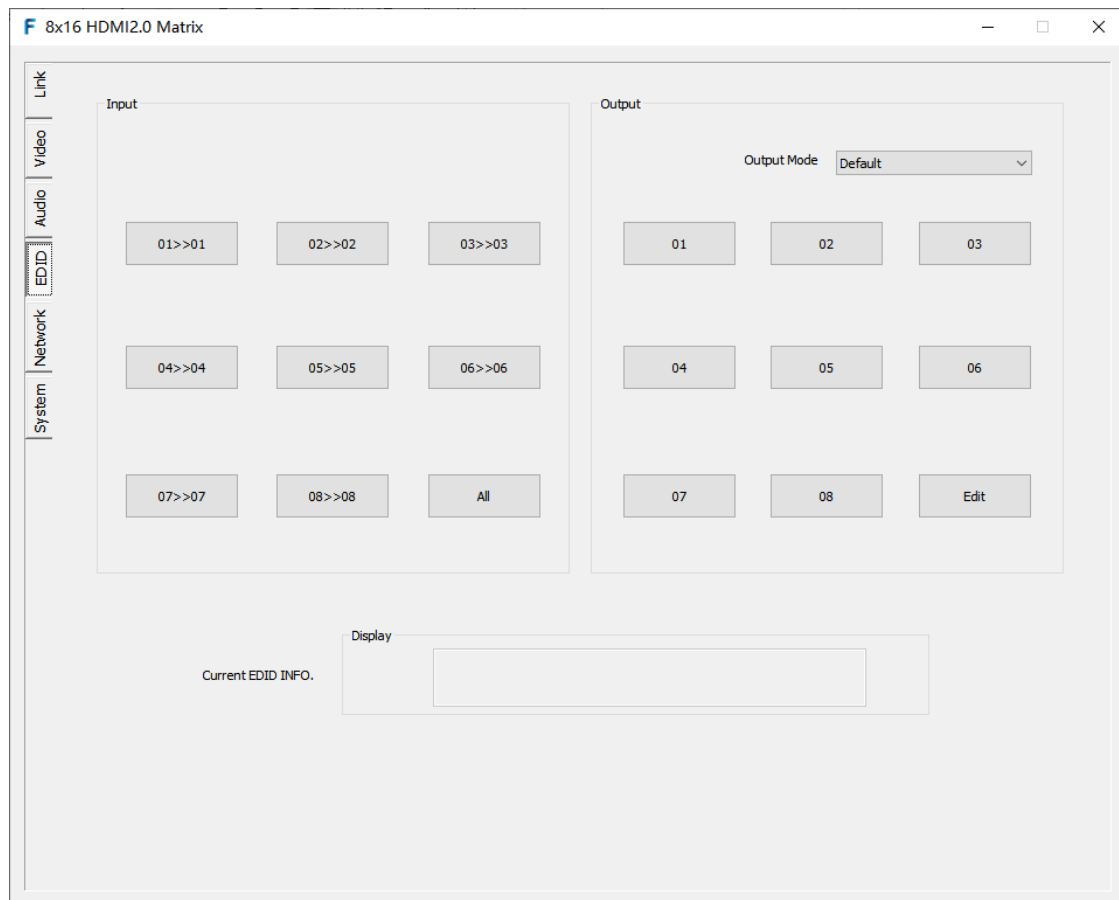

EDID interface (P16)

Usage:

1. Copy EDID:

Select the corresponding Input port in the Input (multiple options are available, you need to select All and click the All button)

Select the Output port is HDMI (Default/User/HDBT) in the Output Mode drop-down box.

Select the corresponding Output port in the Output to complete the operation


2. The user to edit EDID

Description: copy the Output EDID(currently only supports HDMI and HDBT) to the user-defined EDID(User Mode in Output Mode)

Specific steps: click Edit in the lower right corner of the Output dialog box, and the EDID Edit Page dialog box pops up. Select the corresponding User mode port in the User Option area (multiple options are available). In the Save Option area, select any HDBT or HDMI Output port (single Option) to copy the Output port information to the selected User port.

3. Click Exit or X to Exit the interface

4. Default EDID: 01-08 EDID can be selected after clicking default

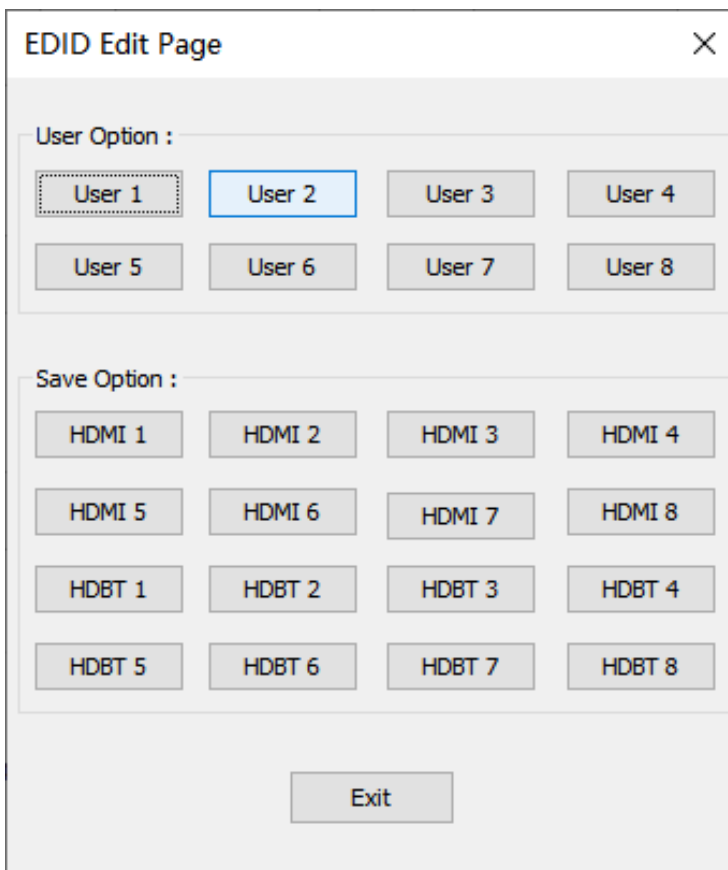

“Network” interface description:


1. Network INFO: MAC address can only be displayed and cannot be modified

2. DHCP off state: when using static IP, IP and other addresses can be modified. After apply is applied, it needs to log in the GUI interface again and use the new IP address

3. DHCP on state: use the key switch to switch to DHCP on state, use dynamic IP, IP and other addresses below, and the dialog box turns gray.

Can not be modified, can display the current IP address information


4. DHCP switch is a compound switch, and DHCP On and DHCP Off are two choices. When Off is displayed, it means the current state is static; when On is displayed, it means the current state is dynamic

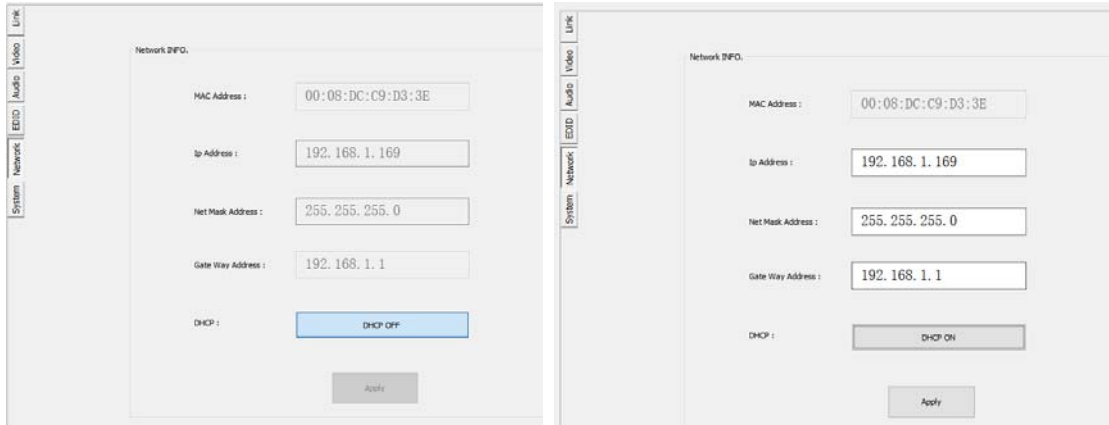

Network interface(P17)


“System” interface description:

1. Product Model :(can be modified)
2. Firmware: software version (that cannot be modified)
3. Product type: original product type (cannot be modified)
4. Reboot: reboot the device
5. Factory: restore factory Settings
6. Operation steps: click reboot (factory) and the dialog box system restart (default setting) will pop up. Click OK

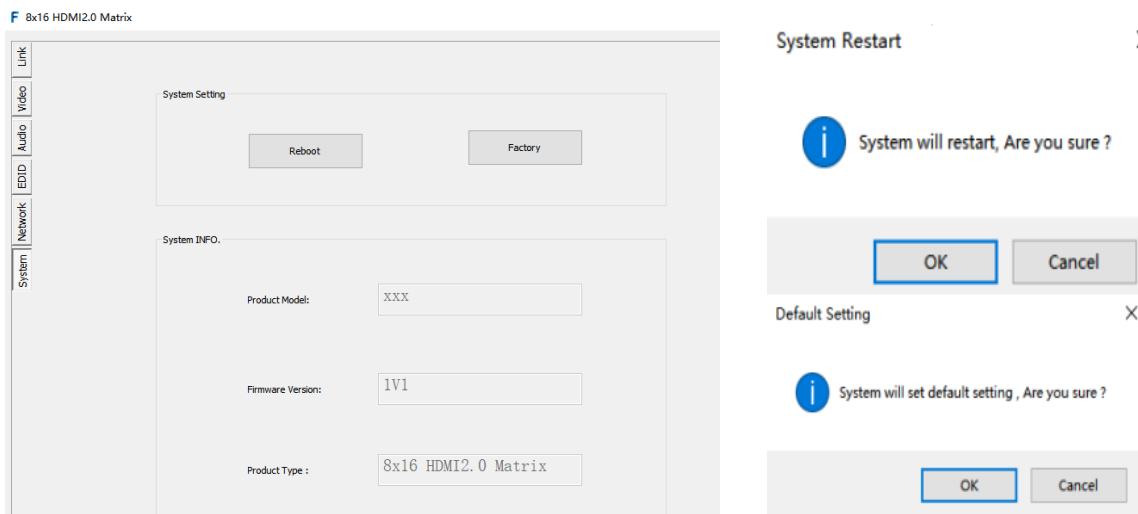


System interface(P18)

10. Web Control

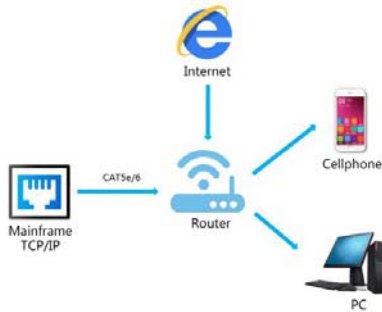

10.1 Change the IP address of your PC.

- 1). Connect the Ethernet port of matrix to the Ethernet port on PC by a crossover cable with RJ45 connectors.
- 2). Configure your PC as follows:
 - ① Click **Start > Control Panel > Network and Sharing Center**.
 - ② Click **Change Adapter Settings**.
 - ③ Highlight the network adapter you want to use to connect to the device and click **Change settings of this connection**.
- 3). The local Area commotion properties window for Network selection appears as below:
- 4). Click the Highlight **Internet Protocol Version 4 (TCP/IPv4)**.
- 5). Click **Properties**.
- 6). Select **Use the following IP Address** for static IP addressing and fill in the details.
For TCP/IPv4 you can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.168).
- 7). Click **OK**.
- 8). Click **Close**.

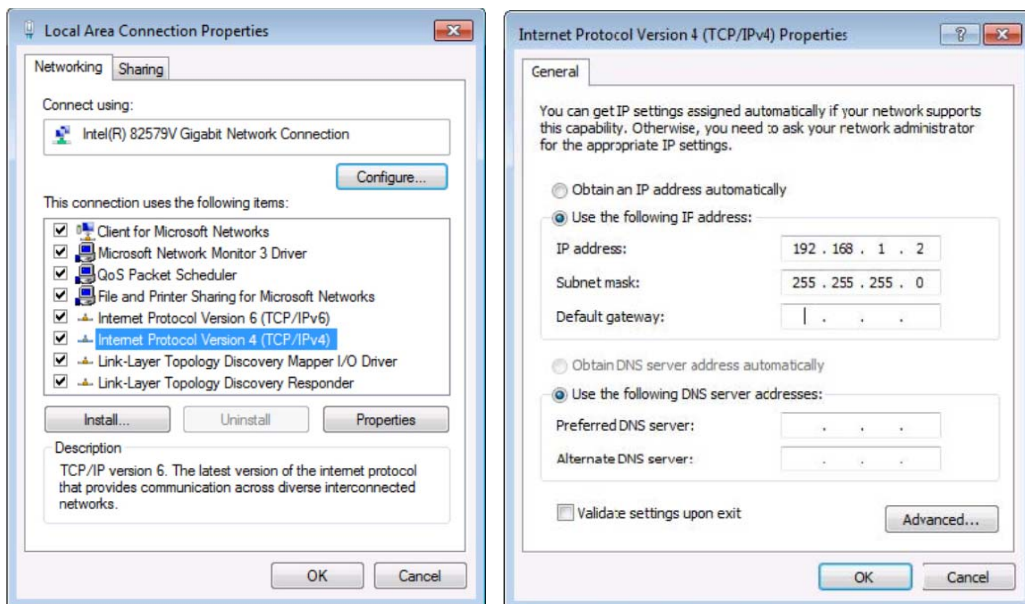

Web Control (P19)

(Default IP Address: 192.168.1.168; MASK: 255.255.255.0; Gateway:192.168.1.1; MAC:0008-DCCA-CF3F)


10.2 Enter Web and Control.

1) Enter the default IP address of the matrix: 192.168.1.168.

2) You will see following picture and control:

(User Name: admin; Password:123456)

Note: web control is recommended to use Google, fire fox, IE8 and above browsers, using other browsers may not be compatible

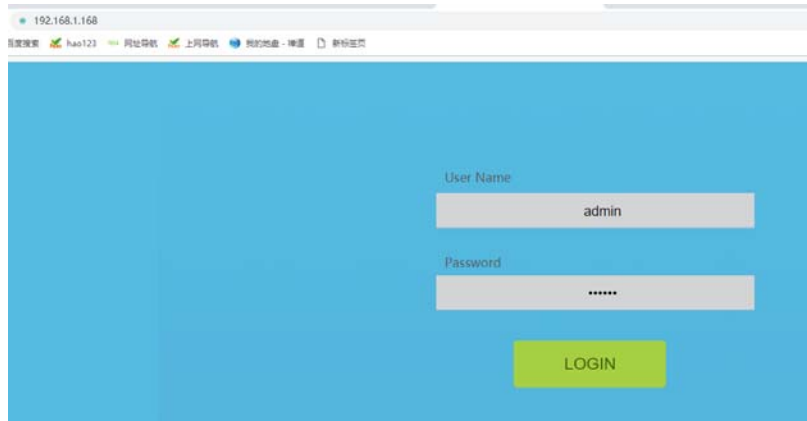

Web Control (P20)

“VIDEO” interface description:

1. Output selection bar: 01>>0~08>>08, input option bar: 01~08 means input port; all means select all

2. Video switch: First select the output then input, gray means selected, and then click apply to complete the switch.


For example: select 03>>01 then click 01, and finally click apply

Blue box will be displayed when signal source or TV is connected

3. Scenario application


Save: first select any one of preset 1-8, gray means selected, and then click save to complete the save

Apply: select any one of preset 1~8 and click Apply again to complete the recall

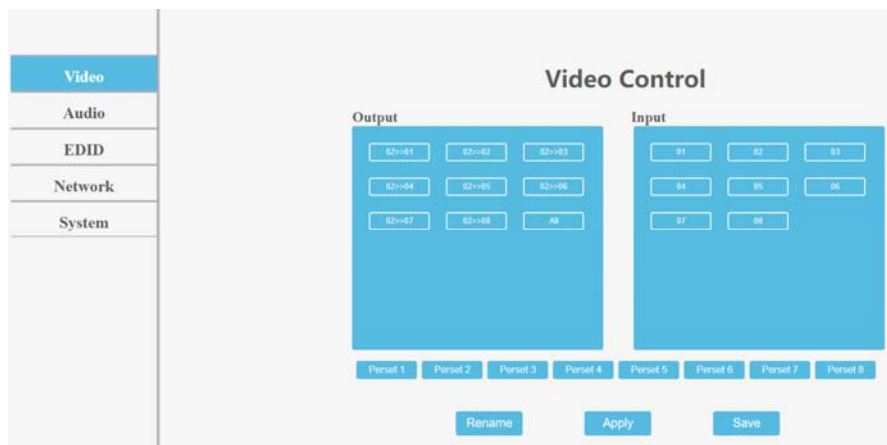


Web control (P21)

5. Rename: modify input/output port name. Operation steps: click into the interface of port modification, enter the name of modification in the new name column and click apply

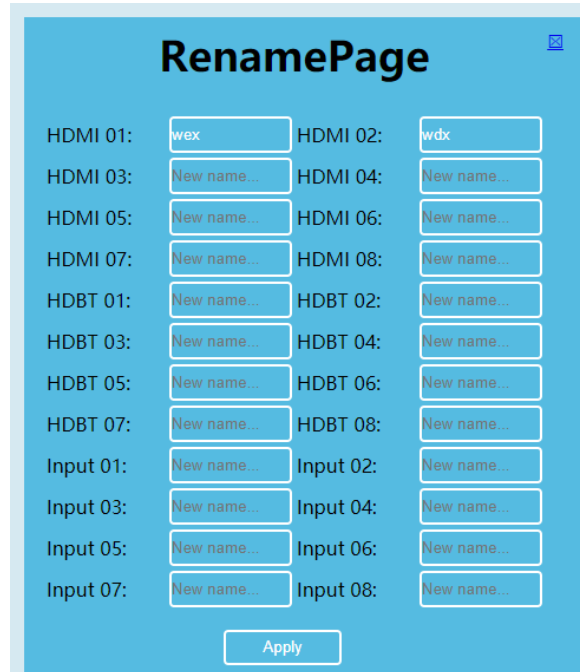

“AUDIO” interface description:

1. Input audio mixing: H means HDMI audio mixing, A means analog audio mixing, 01~08 means audio input port, All: all selected
2. Output audio separation: A means analog audio separation; S means spdif audio separation; 01~08 means audio output port; All: all selected
3. Gray means selected

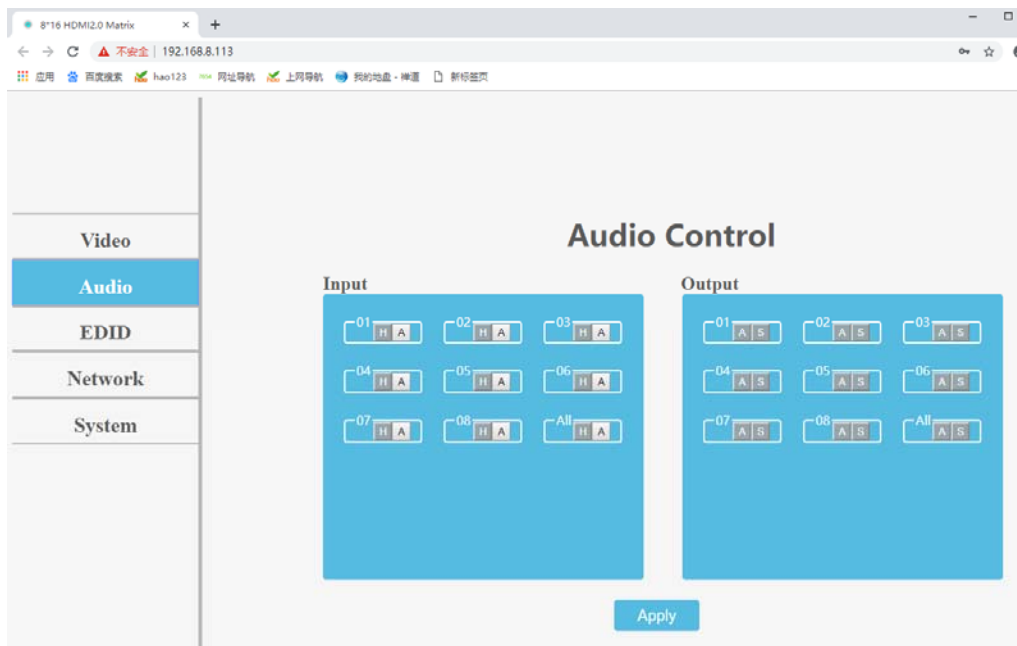

Web control(P22)


“EDID” interface description:

EDID copy: HDMI01>>01 means copy output HDMI01’s EDID;
HDBT01>>01 means copy HDBT01’s EDID

Default EDID:



Default1	4K60 444 HDR AC-35.1	Default5	4K30 444 3D LPCM2.0
Default2	4K60 444 HDR LPCM7.1	Default6	4K60 420 HDR 3D AC-35.1
Default3	4K60 444 HDR LPCM2.0	Default7	4K60 420 3D LPCM2.0
Default4	4K60 444 LPCM2.0	Default8	1080P60 444 3D LPCM2.0

Gray means selected

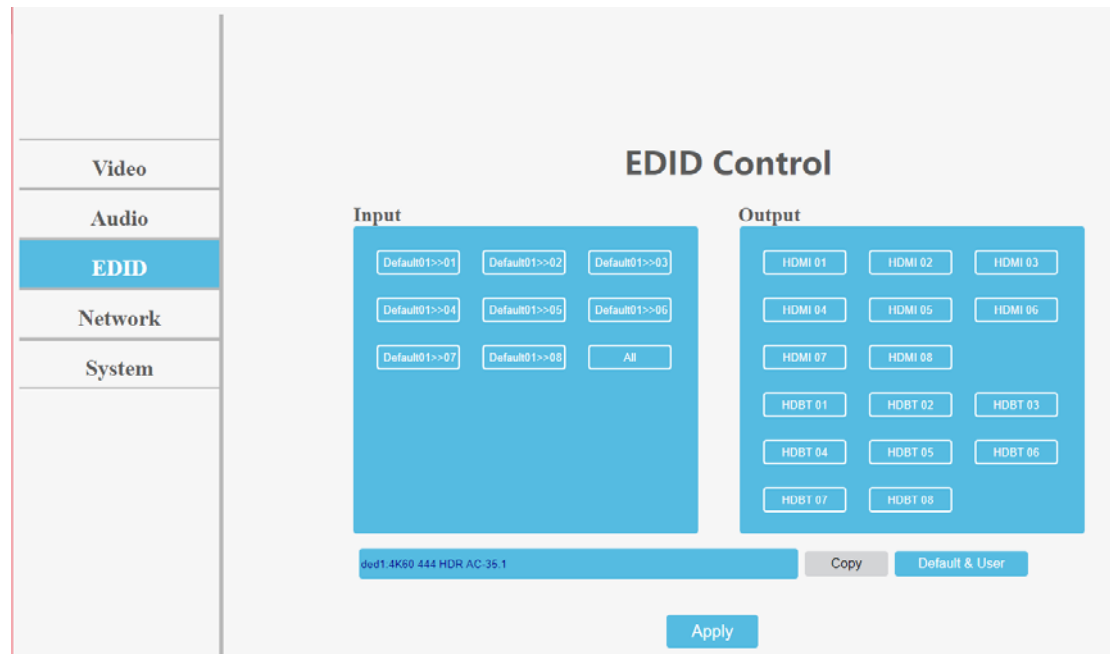

Web control(P23)


User EDID: user1~8 means the user's EDID. A total of 8 EDID can be saved.
Click edit to enter the user setting interface, select any port in the save option, then click save to one of the user ports, and then click apply to confirm

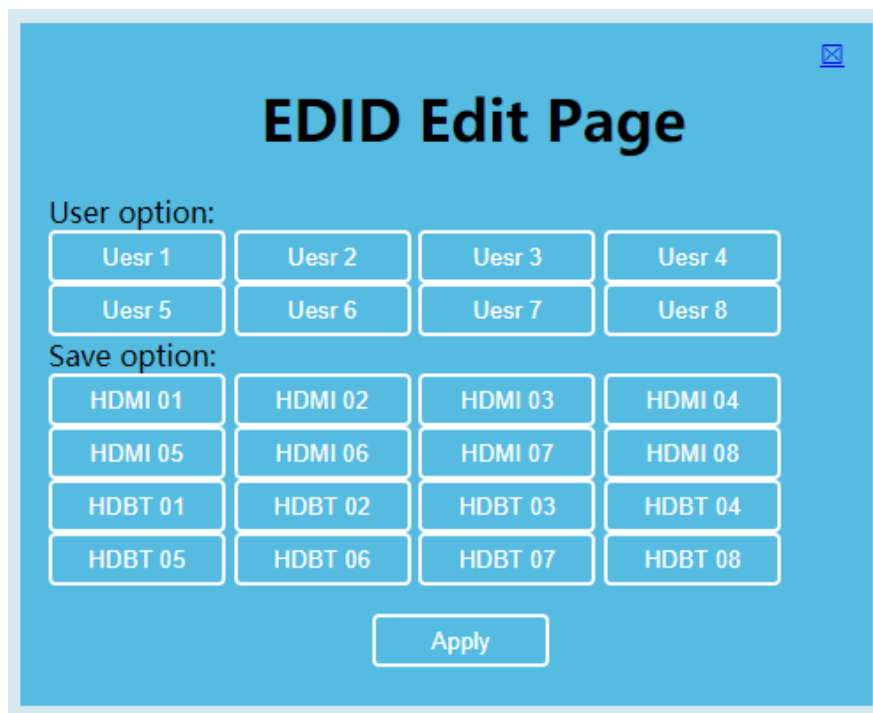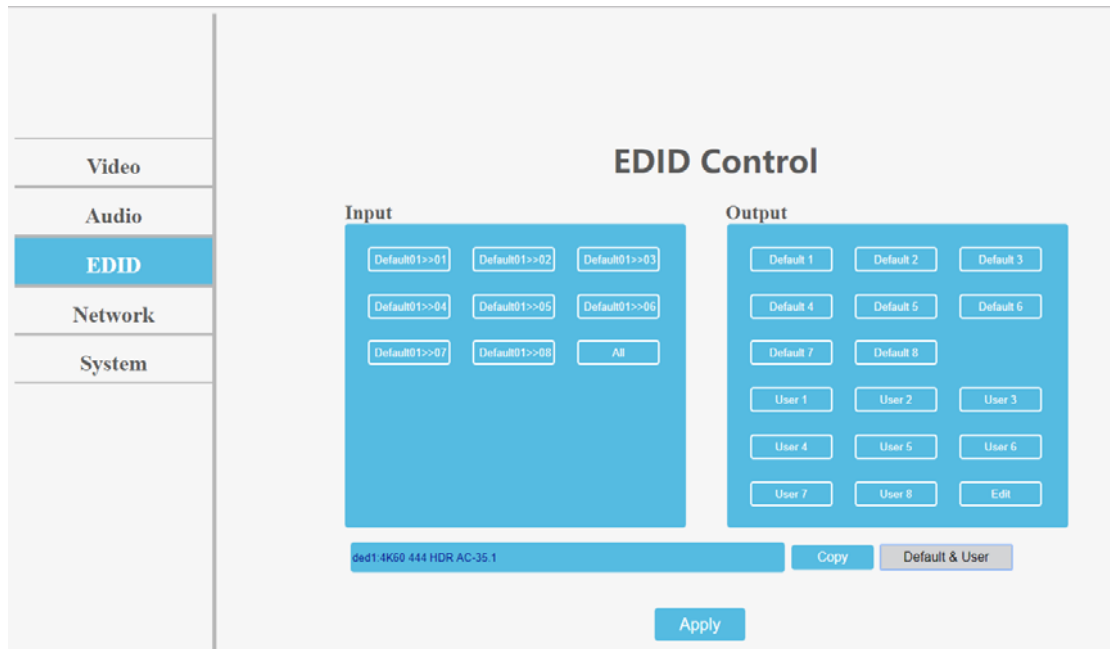

Web control(P24)

“Network” interface description:

1. The interface displays Mac address, IP address, sub code mask and gateway address
- 2.DHCP can only modify IP address, sub net mask and gateway in the off state, and does not support any parameter modification in the on state
- 3.DHCP switch: click Apply after click the white scroll bar to modify

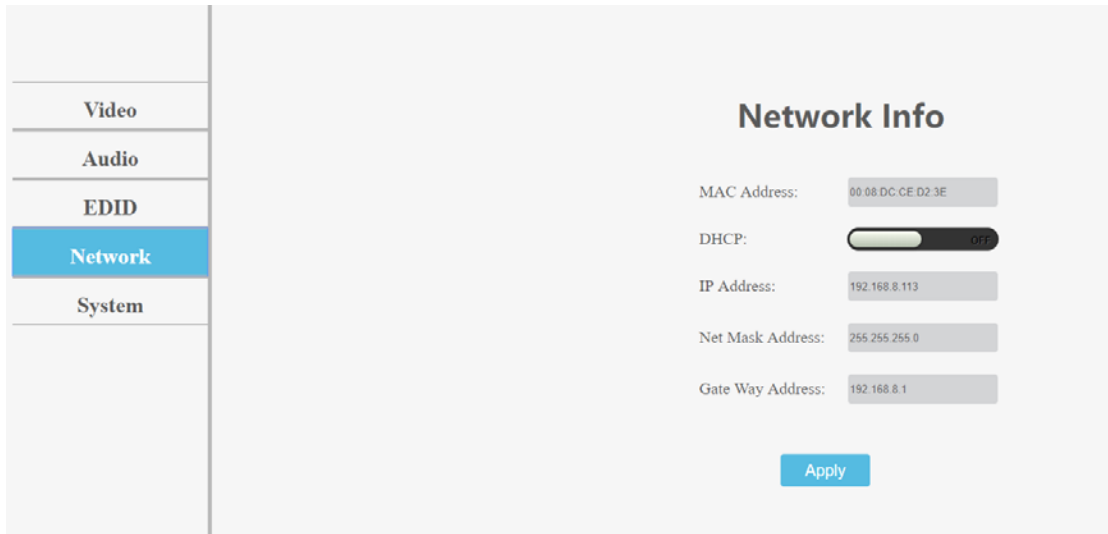


Web control(P25)

System interface description:

The user name means change the logged-in user name. New password means enter the new password in the login interface, age password means enter the new password again, and click apply to complete the modification after entering

(1.Matrix has 5 default accounts: admin~admin4, password: 123456. Account has level permissions

2. Only supports changing 6-15 characters of the account password in the form of letters, underscores and Numbers.)

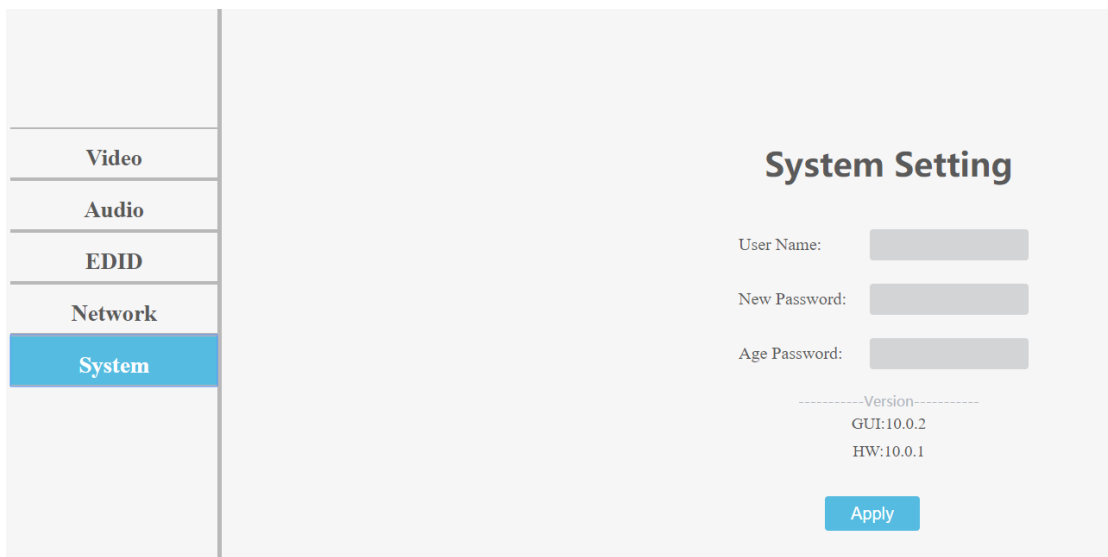

11.RS232 Pass through

By RS232 Command , the matrix can send RS232 data to control the receivers ,also the receiver can send RS232 data to control the Matrix.

Please refer to the command list which included in the manual.

12. RS232 Online upgrading Firmware

1. Use serial port upgrade, and the host dial code is pre- adjusted to the right to enter the serial port upgrade mode;
- 2.RS232/Micro USB connection computer and product, open special upgrade software, click "Refresh" to make serial number Refresh;
- 3.COM port to choose the port connected with the product;
4. The baud rate setting is consistent with the host baud rate (default 115200);
5. Upgrade instructions in the upgrade instruction box (some instructions are as follows);
A1 means MCU;
A1 01 means GUI;
F0 01 means HTML.
6. Click on the "... "Select the upgrade file for download;
7. Click "Update" and the system starts to upgrade;
8. The updated information box will prompt "Succeed" information when the upgrade is completed, and the representative program has been upgraded successfully.

Note:Before burning, it is confirmed that HDMI/HDBT input and export are suspended.If other devices are connected, the host will automatically stop the upgrade.

If the upgrade progress bar is stopped in the middle of the upgrade, then the host will need to be rebooted, then the serial port will be upgraded.

